









Disabling Simultaneous Equation Solver







The **linSolve**(, **simult**(, and **cSimult**(commands are disabled in menus and in the Catalog. When students try to manually enter these commands, submitting the commands results in an error.


These commands are disabled in the following locations.

Location/Application	Path
Notes	<ul style="list-style-type: none">  Calculations>Algebra>Solve System of Equations...  Matrix & Vector>Simultaneous
Calculator and Scratchpad	<ul style="list-style-type: none">  Algebra>Solve System of Equations  Matrix & Vector>Simultaneous
Catalog ()	<ul style="list-style-type: none"> : Disable linSolve(and Simult(: Within Algebra>Solve System of Equations, disable: <ol style="list-style-type: none"> Find System of Equations Solve System of Linear Equations : Disable Matrix>Simultaneous


Exiting Press-to-Test mode

Exiting Press-to-Test clears all data and documents created while in Press-to-Test mode and restores the files and documents on the handheld before Press-to-Test was launched. To exit Press-to-Test mode, the handheld must be connected to another TI-Nspire™ handheld, TI-Nspire™ CAS handheld, TI-Nspire™ CX handheld, or TI-Nspire™ CAS CX handheld.

1. Connect the handheld to another TI-Nspire™ handheld, using the unit-to-unit connection cable.
2. Press , then select **My Docs** and press  to access the Documents menu.
(**Clickpad**: Press , then select **My Docs**, press  )
3. Select **Press-to-Test**. This menu option is visible and active only while in Press-to-Test mode.
4. Press  and select **Exit Press-To-Test**.

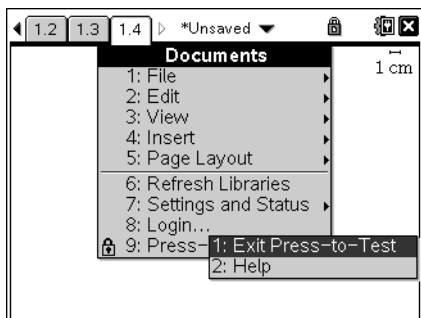

- If the handheld is connected to another handheld, the handheld exits Press-to-Test mode and reboots in normal mode.
- If no handheld is connected, the following message appears:

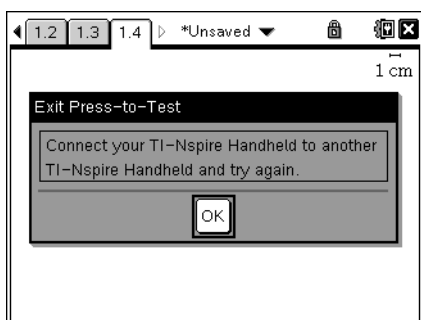

- The handheld does not exit Press-to-Test mode until it reboots. If you disconnect the cable during the transfer, your handheld remains in Press-to-Test mode.

Note: You can also exit Press-to-Test mode by successfully receiving an OS upgrade (from handheld or computer software). Receiving the same OS will not cause the handheld to exit Press-to-Test.

Removing Press-To-Test from multiple handhelds

Teachers running TI-Nspire™ Navigator™ Teacher Software can disable Press-to-Test from multiple handhelds connected to their computer. Your handhelds must be turned on and connected by one of these means:

- The TI-Nspire™ Docking Station or TI-Nspire™ CX Docking Station
- TI-Nspire™ Navigator™ wireless cradle
- TI-Nspire™ CX Wireless Network Adapter
- A direct connection through a standard USB cable

Removing Press-to-Test

1. Ensure you have a folder named Press-to-Test in the File Manager on your computer.
2. Create an empty .tns file named "Exit Test Mode.tns" and save it in the Press-to-Test folder.

Note: Folder and files names are case sensitive and must be named as described.

3. In the Content Workspace, select **Tools > Transfer Tool**. The Transfer Tool window opens.
4. Click **Add to Transfer List**, then navigate to the Press-to-Test folder and select it to add it to the transfer list.
5. Click **Start Transfer**.

The "Exit Test Mode.tns" file is sent to the connected handhelds and placed in the Press-to-Test folder on the handhelds to disable Press-to-Test. The handhelds reboot and the operating system loads.






6. Close the Transfer Tool window when the transfer is complete.


Exiting Press-to-Test from a computer

In a TI-Nspire™ Navigator™ Teacher Software classroom, you can remove Press-to-Test from a handheld while connected to a computer.

1. From the Class workspace, begin a class (if a class is not already in session).

Note: The handheld does not have to be logged in to class to remove Press-to-Test. However, you can remove Press-to-Test if the handheld is logged in.

2. Press , then select **My Docs** and press  to access the Documents menu.
(**Clickpad:** Press , then select **My Docs**, press  )
3. Select **Press-to-Test**. This menu option is visible and active only while in Press-to-Test mode.

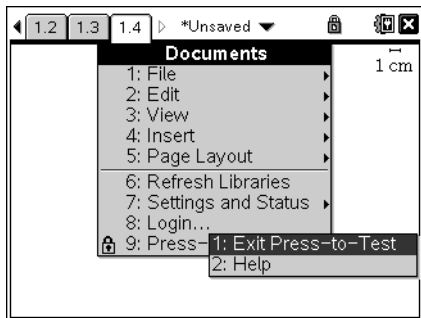

4. Press **▶** and select **Exit Press-To-Test**.

Press-to-Test is removed from the handheld and the handheld reboots. Press-to-Test is not removed until the reboot process is complete.

If a class is not active, the message "*Connect your TI-Nspire™ Handheld to another TI-Nspire™ Handheld and try again*" is displayed.

Returning from Press-to-Test to normal functionality

Exiting Press-to-Test clears all data and files created while in Press-to-Test mode. All files and system settings are restored to what they were before Press-to-Test was enabled on the handheld.

- All documents created during the Press-to-Test session are permanently deleted. If you re-enter Press-to-Test mode, the documents are not listed in the Press-to-Test folder.
- If a document was open before you entered Press-to-Test mode, that document is restored to the same view (My Documents, Page sorter, or page view) when you exit Press-to-Test mode. If the open document contained unsaved changes, the restored open document is still unsaved.
- If there is no open document, the handheld displays My Documents.

Press-to-Test for TI-84 Plus mode

To enter Press-to-Test mode in TI-84 Plus mode, the TI-84 Plus keypad must be in place and TI-84 Plus mode must be enabled.

Note: Using Press-to-Test in TI-84 Plus mode does not impact TI-Nspire™ files. The information in this section only applies to TI-Nspire™ when using the TI-84 keypad.

ERROR: undefined
OFFENDING COMMAND:

STACK: